



| PUSH-BUTTON BOLTS   |    |     |    |    |
|---------------------|----|-----|----|----|
| CODE                | F  | L   | S  | X  |
| D00350.20.XX        | 20 | 202 | 16 | 18 |
| <b>D00350.25.XX</b> | 20 | 252 | 16 | 18 |
| D00350.30.XX        | 20 | 302 | 16 | 18 |
| D00350.40.XX        | 20 | 402 | 16 | 18 |